

Roxil® 100 Wood & Patio Cleaner

Product Information

Roxil® 100 Wood & Patio Cleaner is a biocidal cleaner designed to remove algae and mould from exterior surfaces such as decking, fencing, sheds and patios. Applying the cleaner prior to washing the surface will ease the removal of dirt from the surface. It can be used as part of a maintenance regime in conjunction with **Roxil Patio Cream** and **Roxil Wood Protection Cream**.

Benefits

- Kills mould and algae
- Fast & non-abrasive cleaning
- Compatible with **Roxil Patio Cream** and **Roxil Wood Protection Cream**
- Biodegradable formulation
- Long-lasting

Properties

Appearance	Clear liquid
Recipe Type	Low-viscosity; water based
Density	1.0 g/cm ³
Size(s) & Packaging	5 litre and 1 litre jerry cans, 500 ml spray bottles
Coverage	1 litre will cover approximately 5 m ² ^[1]
Storage	Store above 5°C in dry conditions in original container
Shelf Life	12 months
Active Ingredient(s)	Alkyl (C12-16) dimethylbenzyl ammonium chloride (0.98% w/w), surfactants
Effective Against	Mould and algae
HSE Number	10386



Application Information

Roxil® 100 Wood & Patio Cleaner should be applied in dry weather – ideally when no rain is forecast for the next 24 hours.

Prior to application, surfaces should be brushed to remove any loose material.

Roxil® 100 Wood & Patio Cleaner can be applied by brush, roller or spray. Apply 1 litre of product per 5 m² of surface ^[1].

Care should be taken to ensure that **Roxil® 100 Wood & Patio Cleaner** does not splash onto plants.

Leave **Roxil® 100 Wood & Patio Cleaner** for 1 hour or for best results leave for 24 hours prior to washing off. Surfaces covered in algae will start to go brown or black over time. This is a sign that the product is killing the algae. At this point the substrate can be cleaned. Well-established lichens can become embedded in the surface and they may require strong abrasion to remove them.

A clean finish can be achieved by using a stiff brush in combination with a garden hose. A power washer can also be used, however power washing may affect the finish of wooden surfaces. Regular power washing of patios can erode the surface and damage jointing.

Other Information

This material and its container must be disposed of in a safe way. Do not empty into drains. Do not contaminate ground, waterbodies or watercourses with chemicals or used container. Once the container is empty, rinse out onto the treated surface prior to disposal. The empty container is suitable for recycling.

^[1] The coverage will vary depending upon the overall porosity of the substrate to be treated.

Store in a safe place. Keep away from food, drink and animal feedstuffs. Keep out of reach of children and animals.

Unprotected persons and animals should be kept away from treated surfaces until dry. For full health and safety information consult Safety datasheet (available on request). Always read the label.

Roxil® 100 Wood & Patio Cleaner is produced in accordance with ISO 9001 and ISO 14001 quality and environmental management systems.

Information given is in good faith based on experience and usage, however all recommendations are made without warranty or guarantee, since the conditions of use are beyond our control. All goods are sold in accordance with our Conditions of Sale, copies of which are available on request. Customers are advised that products, techniques and codes of practice are under constant review and changes occur without notice; please ensure you have the latest updated information.